

# **BE SAFE**

Safety, Maintenance and Warranty

# INSTANT™ VORTEX™ PLUS CLEARCOOK

DUAL AIR FRYER 2 X 4L

---

## **Safety Instructions**

At Instant, we want you to feel comfortable using our products. This Instant™ Vortex™ Plus was designed with your safety in mind.

*When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.*

**Read all instructions before using and only use this appliance as described in the in-box materials. Failure to follow these safeguards and instructions may result in injury and/or property damage and can void your warranty.**



# IMPORTANT SAFEGUARDS



## READ ALL INSTRUCTIONS

### **⚠️ WARNING**

#### **Placement**

**DO** place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.

**DO NOT** place the appliance on or close to a hot gas or electric burner, or a heated oven.

**DO NOT** use the appliance near water or flame.

**DO NOT** use outdoors. Keep out of direct sunlight.

**DO NOT** place on anything that may block the vents on the appliance.

**DO** make sure all parts are dry and free of food debris before use.

#### **General Use**

**DO NOT** touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot.

**DO** use the appliance's handles and knobs.

**DO** use oven mitts when removing accessories.

**DO** place hot accessories on a heat-resistant surface or cooking plate.

**DO NOT** cover the crumb tray or any part of the air fryer with foil. This will cause overheating of the air fryer.

**DO NOT** move the appliance while it is in use.

## **⚠ WARNING**

**DO NOT** allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used near children and individuals with reduced capabilities. Children should not play with this appliance.

**DO NOT** use the appliance for anything other than household use. It is not intended for commercial use.

**DO NOT** leave the appliance unattended while in use.

**DO** avoid contact with moving parts. Failure to do so may result in injury.

**DO NOT** use the appliance for more than 60 minutes in a 2-hour period.

### **Air Frying Cautions**

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing hot accessories from the appliance. Failure to do so may result in injury or property damage.

While cooking, the internal temperature of the appliance reaches very high temperatures. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature.

**DO NOT** use a ceramic-coated or stoneware pot (such as CorningWare stoneware) for air frying.

**DO NOT** block the vents on the air fryer. Leave at least 13 cm of space around the air fryer when in use.

**DO NOT** place the appliance on a hot stove.

**DO NOT** operate the appliance on or near combustible materials such as tablecloths and curtains.

**DO NOT** cover the air vents while the air fryer is in operation. Doing so will prevent even cooking and may cause damage to the appliance.

## **⚠ WARNING**

**DO NOT** overfill the air fryer. Overfilling may cause food to contact the heating element, which may result in fire, property damage, and/or personal injury.

**DO NOT** pour oil into the cooking container. If needed, spray food lightly with non-stick cooking spray. Using cooking oil could result in personal injury and/or property damage.

**DO** use caution with cooking containers made of materials other than metal. Failure to do so may result in fire, personal injury, and/or property damage.

Should the unit emit black smoke during use, press Cancel and unplug the appliance immediately. Wait for smoking to stop before removing the lid, then clean thoroughly. For further information refer to 'Troubleshooting' in the User Manual.

**DO** use extreme caution when moving the appliance containing oils or other hot liquids.

**DO** use extreme caution when removing the tray or disposing of hot grease.

**DO NOT** use this appliance for deep frying foods.

### **Accessories**

**DO** use only accessories or attachments authorised by Instant Brands Inc. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.

**DO NOT** use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range or outdoor grill.

## **⚠ WARNING**

### **Care and Storage**

**DO** let the appliance cool to room temperature before cleaning or storage.

**DO NOT** store any materials in the appliance when not in use.

**DO NOT** place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.

**DO NOT** clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or injury.

### **Power Cord**

A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping. This appliance has a 3-prong grounding plug. To reduce the risk of electric shock:

**ONLY** plug the power cord into a grounded electrical outlet.

**DO NOT** remove ground.

**DO NOT** let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.

**DO NOT** use below-counter power outlets.

**DO NOT** use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

### **Electrical Cautions**

The appliance contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock and/or death.

To avoid electrical shock:

To disconnect, select Cancel, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

## **⚠ WARNING**

**DO** allow unit to cool before adding or removing parts or accessories.

**DO** regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at support@instantpot.com.au or by phone at 1800 251 643 or 02 9317 1000.

**DO NOT** attempt to dislodge food while the appliance is plugged into an electrical outlet, as this may cause electric shock, burns or injury.

**DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.

**DO NOT** tamper with any of the safety mechanisms, as this may result in injury or property damage.

**DO NOT** immerse power cord, plug or the appliance in water or other liquid.

**DO NOT** rinse the appliance under tap.

**DO NOT** use the appliance in electrical systems other than 220-240V~50-60Hz.



# SAVE THESE INSTRUCTIONS

# WARRANTY

---

## Limited Warranty

This Limited Warranty is issued by Corelle Brands (Australia) Pty Ltd (Corelle Brands Australia) and is effective for one year from the date of original consumer purchase. Proof of original purchase date and return of your appliance is required to obtain service under this Limited. Return of your appliance to us will be done in accordance with our instructions only. Provided that this appliance is operated and maintained in accordance with written operating instructions attached to or furnished with the appliance or published operating instructions on [www.instantpot.com.au](http://www.instantpot.com.au), Corelle Brands Australia will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

We remind you the appliance you purchased is for personal use only (not commercial use).

Any modification/alteration or attempted modification/alteration to your appliance will void this Limited Warranty, unless such modification/alteration or attempted modification/alteration was expressly authorised by a Corelle Brands Australia Representative in writing.

This Limited Warranty only covers Corelle Brands Australia's appliances/products and is not extended to any other appliances, products, equipment, components, or devices that you use or may use in conjunction with the Corelle Brands Australia's appliances.

To claim under this Limited Warranty:

1. Contact Corelle Brands Australia at:  
9C Commercial Road, Kingsgrove, NSW, 2208  
Email: [sales.australia@instantbrands.com](mailto:sales.australia@instantbrands.com)
2. Provide a description of the appliance you believe has malfunctioned due to defective parts or workmanship.
3. If it is necessary for the appliance to be sent to Corelle Brands Australia for repair or replacement, Corelle Brands Australia will send you a pre-paid shipping label and you must send the appliance and your dated sales receipt to Corelle Brands Australia along with the appliance. If you do not have your dated sales receipt, please advise Corelle Brands Australia in advance, and Corelle Brands Australia will attempt to verify your purchase.
4. If Corelle Brands Australia determines that the appliance has malfunctioned due to defective parts or workmanship, and is covered under this Limited Warranty, Corelle Brands Australia will repair and return the appliance, or send you a replacement appliance, at Corelle Brands Australia's cost.
5. Any repaired or replaced appliance will be covered by this Limited Warranty for the remainder of the original warranty period or ninety (90) days following your receipt of the replacement or repaired appliance, whichever is greater.
6. If Corelle Brands Australia confirms the appliance has not malfunctioned due to defective parts or workmanship, and/or is in working order, or if proof of purchase is not verified, Corelle Brands Australia reserves the right to return the appliance to you at your pre-paid cost. If this cost is not met, Corelle Brands Australia reserves the right to dispose of the appliance after 45 days' notice to you.

# WARRANTY

---

## Limitation and Exclusions

To the maximum extent permitted by law, the maximum liability of Corelle Brands Australia, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance or part of the same age.

### *This Limited Warranty does not cover:*

1. Damage resulting from accident, modification/alteration (unless expressly authorised by a Corelle Brands Australia Representative in writing), misuse, abuse, neglect, unreasonable use, use contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on [www.instantpot.com.au](http://www.instantpot.com.au), normal wear and tear, commercial use, improper assembly by you or anyone, disassembly by you or anyone, repair by you or anyone, failure to provide reasonable and necessary maintenance, force majeure event including but not limited to fire, flood, acts of God;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on [www.instantpot.com.au](http://www.instantpot.com.au); or
3. Use of unauthorised parts and accessories, or repairs to parts and systems resulting from unauthorised repairs or modifications/alterations made to your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Corelle Brands (Australia) Pty Ltd.  
An Instant Brands Company.  
9c Commercial Road, Kingsgrove, NSW, 2208. 1800 251 643 or (02) 9317 1000.  
Email: [sales.australia@instantbrands.com](mailto:sales.australia@instantbrands.com)





# Instant™

©2022 Corelle Brands (Australia) Pty Ltd.  
Distributed by Corelle Brands (Australia) Pty Ltd.  
An Instant Brands Company.  
9c Commercial Road, Kingsgrove, NSW, 2208, Australia.

Register your product today at:  
[instantpot.com.au/support/register](https://instantpot.com.au/support/register)

Contact Customer Care:  
Ph 1800 251 643 or 02 9317 1000  
[support@instantpot.com.au](mailto:support@instantpot.com.au)

[instantpot.com.au](https://instantpot.com.au)

© 2022 Corelle Brands (Australia) Pty Ltd.

890-0710-01